

Changing the emergency disarm code


To change the code, you need to know the current emergency disarm code.

The initial emergency disarm code is indicated on the owner's plastic card or PIN envelope included in the delivery set.

Plastic card

The image shows a brown plastic card with rounded corners. It contains several input fields and labels in Russian. At the top left, there is a field labeled 'Логин' (Login). Below it is a field labeled 'Пароль' (Password). To the right of these, there is an orange box labeled 'Код экстренного выключения охраны' (Emergency disarm code) with a white input field inside. Below the orange box is a field labeled 'Сервисный код' (Service code). At the bottom left, there is a field labeled 'Логин и пароль для входа в личный кабинет на сайте starline.online' (Login and password for access to the personal account on the website starline.online). At the bottom right, there is a large grey rectangular area. At the very bottom, there is a grey bar containing the text 'Телефон технической поддержки по России звонок бесплатный' (Technical support phone in Russia, free call) and the phone number '8-800-333-80-30'.

PIN envelope

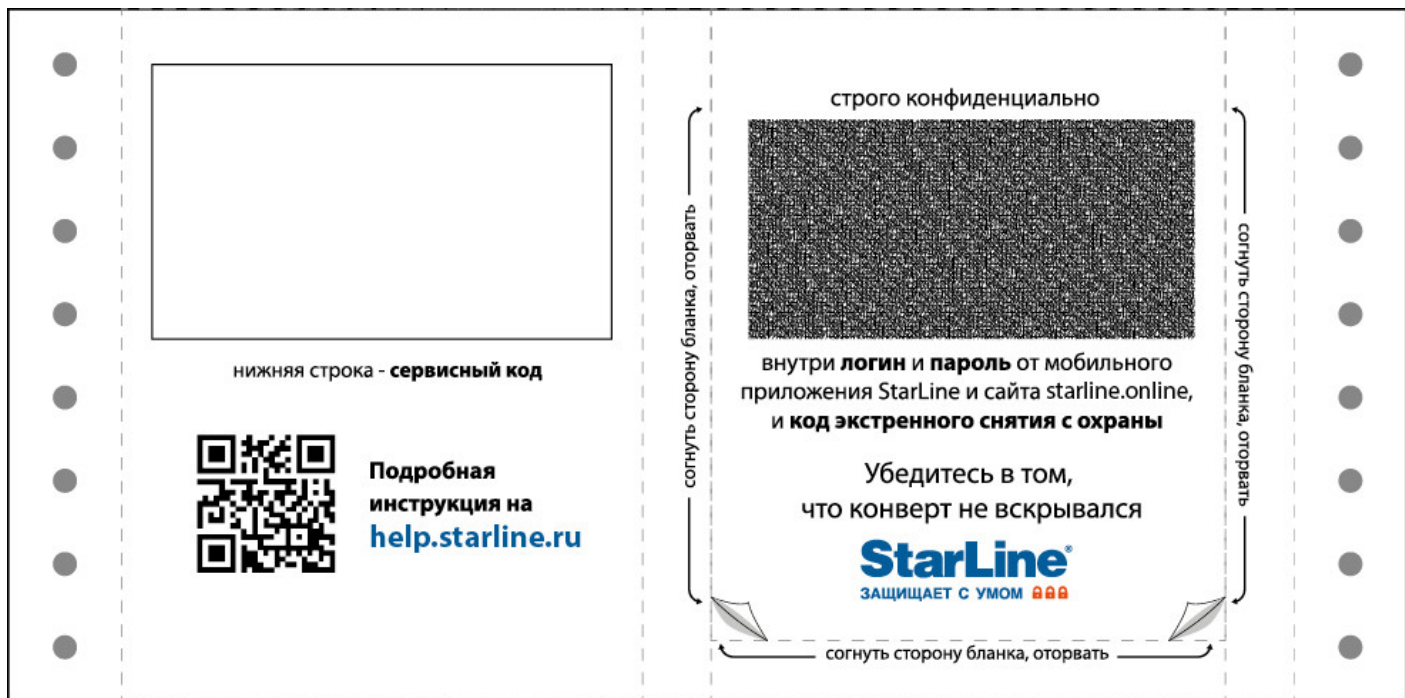

The emergency disarm code may contain any digits except zero.

Changing the emergency disarm code via SMS command

If the system includes a GSM module, send an SMS command **0050XXXXYYYY**, where

- **XXXX** — the 4 digits of the current code;
- **YYYY** — the 4 digits of the new code.

Changing the emergency disarm code via the service button

To change the emergency disarmament code using the service button, you need to first enter the current code and then the new code twice:

1. Put the system in the "Disarmed" mode.
2. Press the service button 4 times.
3. Turn on the ignition. Confirm the action by observing 4 flashes of the service button LED and 4 sound signals.
4. The system's transition to the emergency disarm code change mode will be confirmed by 2 short flashes of the service button LED and 2 sound signals.

If there is no activity within 5 seconds, the system will automatically exit the emergency disarm code change mode.

5. Turn off the ignition.
6. Turn on the ignition and press the service button a number of times corresponding to the first digit of the current emergency disarm code.
7. Turn off the ignition. The service button LED will light up, and the number of flashes will correspond to the digit position of the emergency disarm code (1, 2, 3, or 4 times).
8. Repeat steps 6...7 for the remaining code digits.
9. There will be 2 flashes of the service button LED and 2 sound signals, confirming the correct entry of the current code.
10. Turn on the ignition. Press the service button a number of times corresponding to the first digit of the new emergency disarm code.
11. Turn off the ignition. The service button LED will light up, and the number of flashes will correspond to the digit position of the emergency disarm code (1, 2, 3, or 4 times).
12. Repeat steps 10...11 for the remaining new code digits.
13. There will be 2 flashes of the service button LED and 2 sound signals, confirming the acceptance of the new emergency disarm code.
14. Enter the new code again by repeating steps 10...12.
15. There will be 2 flashes of the service button LED and 2 sound signals, confirming the recording of the new emergency disarm code.

Example of changing the emergency disarm code using the service button

To change the current emergency disarm code from 7184 to the new one, 5463, follow these steps:

 
1. Ensure that the system is in "Disarmed" mode.
2. Press the service button 4 times.
3. Turn on the ignition. The service button will flash 4 times, accompanied by 4 beep sounds.
4. The system will confirm the transition to the emergency disarm code change mode with 2 short flashes of the service button LED and 2 beep sounds.
5. Turn on the ignition.
6. Press the service button 7 times. Turn off the ignition.
7. The service button will flash once.
8. Turn on the ignition.
9. Press the service button once. Turn off the ignition.
10. The service button will flash twice.
11. Turn on the ignition.
12. Press the service button 8 times. Turn off the ignition.
13. The service button will flash three times.
14. Turn on the ignition.
15. Press the service button 4 times. Turn off the ignition.
16. The service button will flash four times.

17. Two short LED flashes and 2 beep sounds will confirm the correct entry of the current code.
18. Turn on the ignition.
19. Press the service button 5 times. Turn off the ignition.
20. The service button will flash once.
21. Turn on the ignition.
22. Press the service button 4 times. Turn off the ignition.
23. The service button will flash twice.
24. Turn on the ignition.
25. Press the service button 6 times. Turn off the ignition.
26. The service button will flash three times.
27. Press the service button 3 times. Turn off the ignition.
28. The service button will flash four times.
29. Two short LED flashes and 2 beep sounds will confirm the acceptance of the new emergency disarm code.
30. Turn on the ignition.
31. Press the service button 5 times. Turn off the ignition.
32. The service button will flash once.
33. Turn on the ignition.
34. Press the service button 4 times. Turn off the ignition.
35. The service button will flash twice.
36. Turn on the ignition.
37. Press the service button 6 times. Turn off the ignition.
38. The service button will flash three times.
39. Press the service button 3 times. Turn off the ignition.
40. The service button will flash four times.
41. Two short LED flashes and 2 beep sounds will confirm the recording of the new emergency disarm code.

Changing the emergency disarm code using the transceiver button

To change the emergency disarm code using the transceiver button, first enter the current code, then the new code twice:

1. Put the system in "Disarmed" mode..
2. Press the transceiver button 4 times.
3. Turn on the ignition. Confirm the action by observing 4 flashes of the transceiver LED and 4 sound signals.
4. The system's transition to the emergency disarm code change mode will be confirmed by 2 short flashes of the transceiver LED and 2 sound signals



If there is no activity within 5 seconds, the system will automatically exit the emergency disarm code change mode.

5. Turn off the ignition.
6. Turn on the ignition and press the transceiver button the number of times corresponding to the first digit of the current emergency disarm code.
7. Turn off the ignition. The transceiver LED will light up, with the number of flashes corresponding to the position of the code digit (1, 2, 3, or 4).
8. Repeat steps 6 to 7 for the remaining code digits.
9. Two LED flashes and 2 beep sounds will confirm the correct entry of the code.
10. Turn on the ignition. Press the transceiver button the number of times corresponding to the first digit of the new emergency disarm code.
11. Turn off the ignition. The transceiver LED will light up, with the number of flashes corresponding to the position of the code digit (1, 2, 3, or 4).
12. Repeat steps 10 to 11 for the remaining digits of the new code.
13. Two LED flashes and 2 beep sounds will confirm the acceptance of the new emergency disarm code.
14. Enter the new code again by repeating steps 10 to 12.
15. Two LED flashes and 2 beep sounds will confirm the recording of the new emergency disarm code.

Example of changing the emergency disarm code using the transceiver button

To change the current emergency disarm code from 7184 to the new one, 5463, follow these steps:

1. Ensure that the system is in "Disarmed" mode.
2. Press the transceiver button 4 times.
3. Turn on the ignition. The transceiver LED will flash 4 times, accompanied by 4 beep sounds.
4. The system will confirm the transition to the emergency disarm code change mode with 2 flashes of the transceiver LED and 2 beep sounds.
5. Turn on the ignition.
6. Press the transceiver button 7 times. Turn off the ignition.
7. The transceiver LED will flash once.
8. Turn on the ignition.
9. Press the transceiver button once. Turn off the ignition.
10. The transceiver LED will flash twice.
11. Turn on the ignition.
12. Press the transceiver button 8 times. Turn off the ignition.
13. The transceiver LED will flash three times.
14. Turn on the ignition.
15. Press the transceiver button 4 times. Turn off the ignition.
16. The transceiver LED will flash four times.
17. Two flashes of the transceiver LED and 2 beep sounds will confirm the correct entry of the current code.
18. Turn on the ignition.

19. Press the transceiver button 5 times. Turn off the ignition.
 20. The transceiver LED will flash once.
 21. Turn on the ignition.
 22. Press the transceiver button 4 times. Turn off the ignition.
 23. The transceiver LED will flash twice.
 24. Turn on the ignition.
 25. Press the transceiver button 6 times. Turn off the ignition.
 26. The transceiver LED will flash three times.
 27. Press the transceiver button 3 times. Turn off the ignition.
 28. The transceiver LED will flash four times.
 29. Two flashes of the transceiver LED and 2 beep sounds will confirm the acceptance of the new emergency disarm code.
 30. Turn on the ignition.
 31. Press the transceiver button 5 times. Turn off the ignition.
 32. The transceiver LED will flash once.
 33. Turn on the ignition.
 34. Press the transceiver button 4 times. Turn off the ignition.
 35. The transceiver LED will flash twice.
 36. Turn on the ignition.
 37. Press the transceiver button 6 times. Turn off the ignition.
 38. The transceiver LED will flash three times.
 39. Press the transceiver button 3 times. Turn off the ignition.
 40. The transceiver LED will flash four times.
 41. Two flashes of the transceiver LED and 2 beep sounds will confirm the recording of the new emergency disarm code.
-

Версия #1

Admin создал 22 мая 2024 16:35:24

Admin обновил 22 мая 2024 16:35:24