

Light and sound indication



The security complex provides various options for indicating modes such as "Disarmed", "Armed", and "Alarm":



























- **Hidden:** Light and sound indicators are disabled.
- **Silent:** Only light indicators are enabled.
- **Sound:** Only sound indicators are enabled.
- **Full:** Both light and sound indicators are enabled.










The default setting includes sound notifications with sirens and emergency light signals. The indicator mode is configured by the installation specialist during complex setup.

Indicator table

The security complex informs about its status by means of sound (horn) and light signals (turn signals):

-  — short signal;
-  — long signal.

Event	Light signals	Horn
Security activation		
Security activation with security zone breach	   	   
Security activation with deactivation of «Hands free»		 
Security activation with deactivation of «Hands free» mode with security zone breach	   	    
Security deactivation	 	 




Security deactivation (one of the zones was violated in the security cycle)		
Security deactivation with disabling 'Hands-Free' mode	—	
Alarm	30 s	30 s
Warning level alarm		
Panic	10 s	10 s
Trunk opening		
Exit from service mode		

LED Indicator

System State	LED Indicator
Disarmed	Not lit
Disarmed with ignition and one zone violation (door, hood, trunk)	Once every 5 seconds
Armed	Once per second
Armed with "Hands-Free" mode enabled	Twice per second
Engine Running	Constantly lit
Service Mode	Not lit
"Trip Prohibition" Function Enabled	Not lit
Anti-hijacking Mode Enabled	10 times per second
Incorrect Emergency Disarm Code Entered	Four times
Emergency Disarm Code Entry Blocked for 15 minutes	Five times
Correct Emergency Disarm Code Entered	Twice

Sound Indicator

Event	Sound Indicator
Waiting for Authorization	10 seconds

Event	Sound Indicator
Key Fob Battery Low (when ignition is turned on)	
Successful Owner Authorization Code Input	
Incorrect Owner Authorization Code Input	

Версия #1
Admin создал 22 мая 2024 16:35:23
Admin обновил 22 мая 2024 16:35:23