

# Operating Modes

Security modes	Armed
	Disarmed
	Antihijack
	Alarm
	Panic
Additional modes	«Slave»
	Hands-Free
	Service mode
	Device registration
	Telematic setup

Security modes provide protection for the vehicle against theft.

Additional modes are intended for adding new devices ("Device Registration" mode), disabling security functions for vehicle servicing ("Service Mode"), and convenient system control ("Slave" mode, "Hands-Free" mode).

To control the system using the remote key, a transceiver of 868 MHz must be installed.

## Armed Mode

In "Armed" mode, the following zones are monitored:


- Ignition
- Doors
- Trunk
- Hood
- Shock sensor

- Tilt sensor
- Motion sensor
- Additional sensor

If any of these zones are breached, the system will switch to "Alarm" mode.

Arming is only possible with the ignition off. If the arming command is sent while the ignition is on, only the central lock will be activated.

Arming can be activated in one of the following ways:


- Short press on button  of the remote key;
- SMS command **11** ;
- Voice menu command **11** ;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website;
- By activating the standard security system ("Slave" mode);
- When the tag is lost or the door handle sensor is touched in "Hands-Free" mode
- By pressing the tag button once in "Disarmed" or "Alarm" mode

Successful arming will be confirmed by 1 sound signal and 1 light signal.

If the doors, hood, or trunk are not properly closed, or if any of the door, hood, or trunk switches are faulty (permanently closed), the system will warn you with 4 sound signals and 4 light signals. Restore the breached security zone and check for a single confirming signal indicating entry into the armed mode.

## Silent Arming

Silent arming, which does not use sound signals (siren), can be performed in one of the following ways:

- Triple press on button  of the remote key;
- SMS command **111** ;
- Voice menu command **111** ;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

Successful arming will be confirmed by 1 light signal.

If the doors, hood, or trunk are not properly closed, or if any of the door, hood, or trunk switches are faulty (permanently closed), the system will warn you with 4 light signals.

Restore the breached security zone and check for a single confirming signal indicating entry into the armed mode.


## Emergency Arming

If the tag or remote key battery is dead, and there is no access to the [starline.online](https://starline.online) personal account and StarLine mobile app, use emergency arming:

1. Press the service button or the transceiver button 3 times.
2. Turn on the ignition. Three sound signals will follow.
3. Check for two short sound signals.
4. Turn off the ignition.
5. Exit the vehicle and close all doors.

## Disarmed Mode

Disarming can be performed in one of the following ways:

- Short press on button  of the remote key;
- SMS command **10**;
- Voice menu command **10** ;
- Via the StarLine mobile app
- Through the personal account on the [starline.online](https://starline.online) website
- By deactivating the standard security system ("Slave" mode)
- Upon detection of the tag or touching the door handle sensor ("Hands-Free" mode)
- By pressing the tag button once in "Armed" mode

Successful disarming will be confirmed by 2 sound signals and 2 light signals. If the "Alarm" mode was activated during the armed state, 3 sound signals and 3 light signals will follow.

After disarming, all events that occurred during the armed state will be displayed on the remote key screen.

If no actions are taken within 30 seconds after disarming, the system will automatically switch to "Armed" mode and lock the central locking system.

## Silent Disarming

Silent disarming, which does not use sound signals (siren), can be performed in one of the following ways:

- Triple press on button  of the remote key;

- SMS command **101** ;
- Voice menu command **101** ;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

Successful silent disarming will be confirmed by 2 light signals. If the "Alarm" mode was activated during the armed state, 3 light signals will follow.

After disarming, all events that occurred during the armed state will be displayed on the remote key screen.

If no actions are taken within 30 seconds after disarming, the system will automatically switch to "Armed" mode and lock the central locking system.

## Central Locking During Travel Function

This function is designed for automatically locking the central locking system during a trip based on one of the configurable conditions:

- When the ignition is turned on
- When the vehicle starts moving and the brake pedal is pressed
- When the handbrake is released
- When the gear selector is shifted from the "Park" position for vehicles with automatic transmission
- When the set speed threshold is exceeded

Enabling, disabling, and configuring the "Central Locking During Travel" function is available in the personal account on the [starline.online](https://starline.online) website (Settings → Main Parameters → Central Lock Control).

## Central Lock Unlocking During Travel Function

This function is designed for automatically unlocking the central locking system during a trip based on one of the configurable conditions:

- When the ignition is turned off
- When the gear selector is shifted to the "Park" position for vehicles with automatic transmission
- When the engine is stopped

- When the ignition is turned off or the gear selector is shifted to the "Park" position for vehicles with automatic transmission
- When the handbrake is engaged

Enabling, disabling, and configuring the "Central Lock Unlocking During Travel" function is available in the personal account on the [starline.online](https://starline.online) website (Settings → Main Parameters → Central Lock Control).

## Trunk Unlocking in Armed Mode Function

This function allows the trunk to be opened with the standard vehicle remote key without disarming the system, provided that the tag and/or the system's remote key is within range.

Enabling, disabling, and configuring the "Trunk Unlocking in Armed Mode" function is performed by the installation specialist during setup.

## Keyless Entry System Lock Function

To use this function, tag authorization must be enabled.

The "Keyless Entry System Lock" function provides an additional level of protection against theft in case the standard vehicle key is stolen. In the "Armed" mode, the system blocks the operation of the keyless entry system when the tag is out of range.

By default, the "Keyless Entry System Lock" function is disabled. Contact an installation specialist to activate it.

## Alarm Mode

The "Alarm" mode is activated when any of the zones in the "Armed" mode is breached. The system will trigger the siren and the hazard lights for 30 seconds and notify the owner (phone call, remote key, SMS, notification in the mobile app). If the zone is not restored, the system will repeat the alarm cycle one more time.

When one of the warning zones is breached, 3 sound signals and 3 light signals will follow.

Resetting the "Alarm" mode without disarming the system is done by a short press on buttons or

**2** on the remote key.

Notification options can be configured in the personal account on the starline.online website (Settings → Main Parameters → Light and Siren Control):

- Sound notification with siren and hazard lights
- Notification with hazard lights only
- No light or sound indication

By default, sound notification with siren and hazard lights is enabled.

The siren volume level in "Alarm" mode can be configured in the personal account on the starline.online website (Settings → Main Parameters → Light and Siren Control).

The maximum number of zone activations is limited to 8 cycles per arming period.

## Panic Mode

The "Panic" mode is designed to ensure the safety of the owner and the vehicle.

This mode is activated by the owner's command via a double press on button **1** of the remote key ( **1** ) or SMS command **19** . Upon receiving the command, the system activates the siren and hazard lights for 10 seconds to attract attention.

This mode can also be used to locate the vehicle in a parking lot.

## Anti-Hijack Mode

The "Anti-Hijack" mode is designed to protect the driver from robbery during driving. The system switches to this mode either by the owner's command or when the tag/remote key is not detected.

### Anti-Hijack Mode by Owner's Command

This mode can be activated in one of the following ways:

- By SMS command **31** ;
- By voice menu command **31** ;
- Via the StarLine mobile app;

- Through the personal account on the [starline.online](https://starline.online) website.

The operation algorithm of the mode depends on the support for reading speed data from the vehicle's CAN bus (see [can.starline.ru](https://can.starline.ru) for details).

If the function is supported, after receiving the command, the system will activate warning signals of the upcoming engine block with the siren and hazard lights for 10 seconds. Then, when the speed drops below 30 km/h, the engine will be blocked.



If the function is not supported, after receiving the command, the system will activate warning signals of the upcoming engine block with the siren and hazard lights for 10 seconds. The engine will be blocked either after 3 minutes or upon pressing the brake pedal.

Exiting the "Anti-Hijack" mode and unlocking the engine can be done in one of the following ways:

- By SMS command **30 XXXX**, where XXXX is the emergency disarm code specified on the plastic card or pin envelope of the owner
- By entering the emergency disarm code specified on the plastic card or pin envelope of the owner using the service button or transceiver button
- From the personal account on the [starline.online](https://starline.online) website. The emergency disarm code specified on the plastic card or pin envelope of the owner needs to be entered.

If the emergency disarm code is entered incorrectly 3 times, the ability to enter the code will be blocked for 15 minutes, and the owner will receive an SMS notification.

To enable the "Anti-Hijack" mode by owner's command, go to the personal account on the [starline.online](https://starline.online) website (Settings → Main Parameters → Anti-Hijack by Tag Loss → Uncheck the boxes) or in the StarLine mobile application (Settings → Advanced Settings → Main Parameters → Anti-Hijack by Tag Loss → Uncheck the boxes).

## Anti-Hijack Mode by Tag or Remote Key Loss

The operation algorithm of the mode depends on the support for reading speed data from the vehicle's CAN bus (see [can.starline.ru](https://can.starline.ru) for details).

If the speed reading function is supported, the algorithm is as follows:

- One of the security zones (doors, hood, or trunk) is breached
- The motion sensor is triggered
- After 30 seconds, the system will start searching for the tag/remote key
- After 30 seconds, if the tag/remote key is not detected, the system will activate the siren and hazard lights for 10 seconds
- When the speed drops below 30 km/h, the engine will be blocked

If the speed reading function is not supported, the algorithm is as follows:

- One of the security zones (doors, hood, or trunk) is breached
- The motion sensor is triggered
- After 30 seconds, the system will start searching for the tag/remote key
- After 30 seconds, if the tag/remote key is not detected, the system will activate warning signals of the upcoming engine block with the siren and hazard lights for 10 seconds
- The engine will be blocked either after 3 minutes or upon pressing the brake pedal

Exiting the "Anti-Hijack" mode by tag or remote key loss can be done in one of the following ways:

- When the tag/remote key is within range
- By SMS command **30 XXXX**, where XXXX is the emergency disarm code specified on the plastic card or pin envelope of the owner
- By entering the emergency disarm code specified on the plastic card or pin envelope of the owner using the service button or transceiver button
- From the personal account on the starline.online website. The emergency disarm code specified on the plastic card or pin envelope of the owner needs to be entered.

If the emergency disarm code is entered incorrectly 3 times, the ability to enter the code will be blocked for 15 minutes, and the owner will receive an SMS notification.

By default, the "Anti-Hijack" by tag or remote key loss option is disabled. To enable it, hold the tag button until a long red flash appears, then release the button.

## «Slave» mode

The "Slave" mode allows controlling the system using the standard car alarm remote key.

When deactivating the standard alarm, the system will wait for owner authorization confirmation through any of the methods described below, after which the car alarm will be disabled:

The authorization time will be counted from the moment one of the doors, hood, or trunk is opened.



- Presence of the remote key within the detection zone upon deactivation of the alarm. The search time for the remote key is set from 15 to 60 seconds.
- Presence of the tag within the detection zone upon deactivation of the alarm. The search time for the tag is set from 15 to 60 seconds.
- By entering the owner's authorization code using the standard car buttons (e.g., multimedia control buttons on the steering wheel, window control buttons). The code entry is done with the ignition on. If the owner's authorization code is not entered, the engine will be blocked for 1 minute or until the owner's authorization code is entered when attempting to start the vehicle. The code entry waiting time is set from 15 to 60 seconds.

The "Slave" mode uses a remote key with an LCD. When the standard alarm system switches to the "Alarm" mode, the message "SLAVE" will be displayed on the remote key screen.

For changing the method and waiting time for owner authorization, contact the installation specialist.

## Hands-Free mode

The "Hands-Free" mode is designed for automatic enabling/disabling of the security mode.

You can enable or disable the "Hands-Free" mode using one of the following methods:

- In the cursor menu of the remote key by selecting the corresponding item;
- By SMS commands **71** or **70**, respectively;
- By voice menu commands **71** or **70**, respectively;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

By default, the "Hands-Free" mode is disabled. All mode operation parameters are configured by the installation specialist during installation.

There are several options for enabling and disabling the alarm in the "Hands-Free" mode:

- Enabling the alarm when the tag is lost from sight
- Enabling the alarm by holding the door handle sensor (purchased separately) with the tag in sight
- Disabling the alarm when the tag appears in sight
- Disabling the alarm by touching the door handle sensor (purchased separately) with the tag in sight

The detection zone and loss are adjusted in the personal account on the [starline.online](https://starline.online) website (Settings → Main Parameters → Hands-Free).

By default, the tag's operating range is set to the maximum value.

If the tag is lost from view while the doors, hood, or trunk are open, the system will notify about this event in one or more of the following ways:

- SMS notification when arming;
- SMS notification about cancellation of transition to the "Armed" mode;
- Siren notification about cancellation of transition to the "Armed" mode;
- Cancellation of transition to the "Armed" mode.

If the door, hood, or trunk is open when the alarm is being set, an SMS notification will be sent as a reminder. After the violated security zone is restored, the system will switch to the "Alarm" mode after some time.

In the "Hands-Free" mode, SMS notifications to phones configured to receive alarm messages are available if one of the doors, hood, or trunk is open when switching to the "Alarm" mode.

If the connection is lost or the tag's power element is depleted during the trip, but an event is recorded inside the cabin, the system will ignore the tag signal loss. Ten seconds after the door is opened, the system will automatically switch to the "Alarm" mode.

In the "Hands-Free" mode, automatic arming will not be executed if the tag is within sight.

The parameters of the "Hands-Free" mode can be adjusted in the personal account on the [starline.online](https://starline.online) website (Settings → Main Parameters → Hands-Free).

## Disabling "Hands-Free" Mode for 1 Security Cycle

If the tag remains within range during parking (for example, you're in a cafe while your car is parked nearby), it is recommended to disable the security deactivation in "Hands-Free" mode for 1 security cycle. After completing the security cycle, the system will automatically return to its previous operating mode after opening one of the doors, the trunk, or the hood.

You can disable the security deactivation in "Hands-Free" mode for 1 security cycle using one of the following methods:

- Arming the security system by pressing a button on the tag;
- Arming the security system using the standard key fob;
- Arming the security system with two commands using the standard key fob within 10 seconds.

Successful disabling of the "Hands-Free" mode for 1 security cycle will be confirmed by 1 audible signal.

If the system is in the "Disarmed" mode while the vehicle owner is nearby (for example, unloading the trunk at the cottage), it is recommended to disable the security activation in "Hands-Free" mode for 1 security cycle. After turning on the ignition or sending the "Arm" command, the system will automatically return to its previous "Hands-Free" mode.

You can disable the security activation in "Hands-Free" mode for 1 security cycle using one of the following methods:

- Disarming the security system by pressing a button on the tag;
- Disarming the security system using the standard key fob;
- Disarming the security system with two commands using the standard key fob within 10 seconds.

Successful disabling of the "Hands-Free" mode for 1 security cycle will be confirmed by 1 audible signal.

## Service mode

Service Mode is intended for temporarily disabling security functions and restricting access to system settings. It is recommended during service maintenance.


Enabling Service Mode is only possible from the "Disarmed" mode near the vehicle.

The following functions and modes are unavailable in Service Mode:

- Arming and disarming the security system;
- "Hands-Free" mode;
- Unlocking and locking the central lock during a trip;
- Remote and automatic engine start;
- "Turbo Timer" function;
- Pre-heater control;
- Trunk release;
- Transition to the "Panic" mode;
- Activation of the "Anti-Hijacking" mode by tag or key fob loss;
- Main unit calibration procedure;
- "CAN Information" section in the personal account on the starline.online website or in the StarLine mobile app.

Entering Service Mode can be done using one of the following methods:

- Selecting the corresponding item in the tag cursor menu;

- Short press of the buttons  of the remote key;
- Holding down the tag button for 5 seconds;
- By SMS command **51** ;
- By voice menu command **51** ;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

Exiting Service Mode can be done using one of the following methods:

- Holding down the tag button for 5 seconds;
- By SMS command **50** ;
- By voice menu command **50** ;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.
- By entering the emergency disarm code.

Entering Service Mode will be confirmed by a yellow LED indication on the tag.

In Service Mode, transition to other additional modes is prohibited!

## Automatic Exit from Service Mode

For this function to work, owner authorization must be enabled, sensors must be activated, and vehicle speed information must be available.

The system will automatically exit Service Mode and wait for owner authorization when leaving the service station based on the established event with the ignition on. After successful authorization, the system will switch to the "Disarmed" mode.

If authorization fails, the security system will switch to the "Alarm" mode.

## Immobilizer mode

The Immobilizer Mode prevents movement without additional owner authorization.


Upon disarming or turning off the ignition, the system will wait for authorization confirmation either by the presence of the key fob in the vicinity or by entering the owner's authorization code using the vehicle's standard buttons (e.g., multimedia or window control buttons) while the ignition is on.

If owner authorization is not confirmed within 1 minute, attempting to start the engine will result in it being locked for 1 minute or until the owner's authorization is successfully completed.

When the Immobilizer Mode is enabled alongside the "Slave" mode, both authorization conditions must be met to disarm the system.

## Vehicle Status Control

With this function, users can request information such as engine and cabin temperature, battery voltage, and fuel level.

Requests can be made by the owner with a short press of the key fob button  or by sending SMS command **41**.

When using the key fob, the information will be displayed on its screen, while SMS requests will receive a response SMS message.

The engine temperature readings displayed by the system depend on the location of the engine temperature sensor and may differ from those shown on the vehicle's dashboard.

If the request is made during automatic engine start, the remaining engine runtime will also be displayed in addition to the aforementioned values.

## Engine Start Function

The engine start function allows remote and automatic engine starting/stopping.

### **Preparing a Manual Transmission (MT) Vehicle for Remote and Automatic Engine Start**

Before starting the engine, you need to perform the "Program Neutral" procedure:

1. Engage the parking brake while the engine is running.
2. Remove the key from the ignition switch. The engine will continue to run.
3. Exit the vehicle, close the doors, trunk, and hood, and arm the security system. The engine will be stopped.
4. The system will enter the "Armed" mode.
5. The key fob will display the "N" icon.
6. The system is now ready for remote and automatic engine start.


If a door is opened or the ignition is turned on after performing the "Program Neutral" procedure, remote and automatic engine start will be canceled until the next "Program Neutral" algorithm execution.

## Preparing an Automatic Transmission (AT) Vehicle for Remote and Automatic Engine Star

Ensure that the AT selector is in the "Park" position.

## Engine Start

Remote engine start can be initiated by one of the following methods:

- Long press of button 1 on the remote key: ;
- Triple press of the factory alarm system activation button within a 5-second interval (availability depends on the car model, consult your installation specialist).
- SMS command **21**;
- Voice menu command **21**;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

Automatic engine start can occur under the following conditions:

- Based on temperature value — engine starts when the engine temperature drops below a set value.
- Based on battery voltage value — engine starts when the battery voltage decreases.
- Based on time period — engine starts with a specified runtime after a set repeating time interval.
- Based on the alarm clock — engine starts at a specified time.

Temperature and battery voltage values, interval, and schedule are set:


- In the remote key cursor menu.
- In the StarLine mobile app.
- In the [starline.online](https://starline.online) website personal account.

The minimum engine runtime for remote start is 10 minutes. This can be adjusted in the [starline.online](https://starline.online) website personal account or the StarLine mobile app.

Automatic engine start will not occur if less than 1 hour has passed since the last start or if the previous automatic start failed.  
After a trip, automatic engine start is possible no earlier than 5 minutes after the engine has been stopped.

## Engine Stop

The engine stops if:

- long press of button 2 on the key fob is performed: ;
- An owner command is sent:
  - SMS command 20;
  - Voice menu command 20;
  - Via the StarLine mobile app;
  - Through the personal account on the [starline.online](https://starline.online) website.
- The factory alarm system activation button is pressed three times within a 5-second interval (availability depends on the car model, consult your installation specialist).
- The "Alarm" mode is activated.
- The vehicle starts moving.
- The hood is opened.
- The parking brake is released (for MT vehicles).
- The AT selector is shifted out of the "Park" position (for AT vehicles).
- The brake pedal is pressed.
- The engine reaches the maximum temperature threshold specified during the security system setup to protect the engine from overheating.

### Car driving continuation after remote engine starting

To continue driving the car, without stopping the engine after remote starting, do as follows:

- **for cars with ignition lock:**
  - deactivate complex security;
  - insert the key into the ignition lock, turn it to position «Ignition on» and start moving;
  - the LED on the valet button will go out at movement start, pressing of the brake pedal or parking brake release;
- **for cars with START/STOP button:**

Several options are possible depending on the car and complex connection method:

- **first variant (\*):**
  - deactivate complex security;
  - hold the brake pedal for 3 seconds;
  - the LED on the service button will go out, after which movement can be started (the START/STOP button need not be pressed);
- **second variant (\*):**
  - deactivate complex security;
  - press the START/STOP button 1 or 2 times (\*);
  - the LED on the service button will go out, after which movement can be started.

(\*) Ask the installation specialist during mounting about the connection method of your complex and the operation algorithm.


# Function «Engine starting preheater»

The function allows for engine preheating before starting. The starting preheater can be controlled both in the manual and automatic mode.

## Manual mode

In the manual mode the starting preheater is switched on/off by a command.

The starting preheater can be switched on by one of following methods:


- Sequentially pressing buttons 2 and 1 on the remote key: ;
- by SMS-command **221**;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

The preheater operates for 20 minutes in this mode. To change its duration, consult your installation specialist.

If the preheater has factory settings different from those set by the installation specialist, the operating time may differ from the specified time.

Operation can be prolonged by sending a repeated command for starting preheater switch-on.

The starting preheater can be switched off by one of following methods:

- Sequentially pressing button 2 on the remote key: ;
- by SMS command **220**;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

To protect the engine from overheating, the preheater will stop when the maximum temperature threshold specified during the security system setup is reached. This helps protect the engine from overheating.

## Automatic mode

The automatic mode is activated by the installation specialist during complex setting after mounting.



In automatic mode, the preheater is activated before remote and/or automatic engine start.

Automatic engine start can occur under the following conditions:

- Based on temperature value — preheater starts when the engine temperature drops below a set value.
- Based on the alarm clock — preheater starts at a specified time.

The temperature value and schedule are set:

- In the remote key cursor menu;
- Via the StarLine mobile app;
- Through the personal account on the [starline.online](https://starline.online) website.

If the engine temperature before remote or automatic start is lower than the set value, the preheater will start. When the engine reaches the set temperature (during automatic start) or after the set time elapses, the engine will start.

The preheater is turned off after the set time elapses or when the temperature threshold for disconnection is reached.

The preheater operates for 10 minutes in this mode. To extend the operation, you need to manually send the command to turn on the preheater.  
The operating time and temperature threshold for preheater disconnection can be changed in the personal account on the [starline.online](https://starline.online) website or in the StarLine mobile app.

## «Turbotimer» function

For vehicles with turbochargers, use the "Turbotimer" function to cool the engine turbine.

The "Turbotimer" function is activated by the installation specialist during installation.

To activate the function on vehicles with an ignition key, follow these steps:

- Engage the parking brake with the engine running. The service button LED will light up.
- Remove the key from the ignition switch. The engine will continue to run.
- Exit the vehicle, close the doors, trunk, hood, and activate the "Armed" mode.
- When the turbine cools down, the engine will shut down.

To activate the function on vehicles with a START/STOP button, follow these steps:

- Engage the parking brake with the engine running. The service button LED will light up.
- Exit the vehicle, close the doors, trunk, hood, and activate the "Armed" mode.

- When the turbine cools down, the engine will shut down.

The cooling time for the turbine is calculated automatically and depends on the engine speed before the end of the trip. The maximum turbine cooling time is 5 minutes. For vehicles with a START/STOP button, the turbotimer operation time is automatically extended until the system enters the "Armed" mode.

## Beach mode

In "Beach Mode," there is no need for a tag or key fob to enable/disable the security system (they can be left inside the car). Owner authorization is achieved by entering the emergency disarm code by touching the door handle with a capacitive sensor StarLine ES-1 (optional). In this mode, the system does not respond to key fob commands.

To activate "Beach Mode," follow these steps:

1. Switch the system to the "Disarmed" mode and turn off the ignition.
2. Press the service button three times and turn on the ignition. This will be followed by three audible signals confirming the activation of "Beach Mode." Turn off the ignition.
3. Exit the car and touch the door handle three times. The system will enter the "Armed" mode.

"Beach Mode" deactivates the "Hands-Free" mode until the security system is turned off.

Exiting the mode is done by entering the emergency disarm code by touching the door handle with an interval of no more than 3 seconds. The correct input of the code digit will be confirmed by audible and visual signals, the quantity of which will correspond to the code digit. The correct input of the code will be confirmed by 2 audible and visual signals.

If the emergency disarm code is entered incorrectly 3 times, the possibility of re-entering the code will be blocked for 15 minutes.

After disarming the system, if no actions or commands are given, the system will automatically switch to the "Armed" mode after 30 seconds, and the "Beach" mode will remain active.

## Video recorder control

The "Video Recorder Control" function is activated by the installation specialist during the installation of the system.

The system automatically activates the video recorder for recording in the following cases:

- When the ignition is turned on, it activates for 5 minutes;
- When switching to the "Alarm" mode or triggering the pre-alarm level, it activates for 2 minutes.

It is also possible to activate the video recorder for 5 minutes using SMS command **69**.

If the engine is started when the "Armed" mode is activated, the video recorder will continue to operate until the engine is stopped.

## Risky parking mode

Use this mode when parking in areas with a high risk of theft. In this mode the system will require owner authorization with the factory buttons each time the system is disarmed.

This mode operates independently of the "Immobilizer mode" settings.

To enable/disable the mode, follow these steps:

1. Disarm the alarm.
2. Turn off the ignition.
3. Press the service button twice.
4. Turn on the ignition. Two audible signals will follow.

Enabling the mode will be confirmed by one audible signal and one visual signal, while disabling it will be confirmed by two audible and two visual signals.

---