

Emergency disarming

System can be fully disarmed with emergency disarm code, indicated on owner ID card, when:

- Tag is lost
- Tag or remote key battery discharged
- Anti hijack mode is activated

The screenshot shows a web interface for Starline services. On the left, there are fields for 'Login' and 'Password' with a note: 'The login and password for entering the personal account on the website www.starline-online.ru'. On the right, there is a section titled 'Code of emergency security deactivation' with a white input field highlighted by an orange oval. Below this is a 'Service code' section with two input fields. At the bottom, a banner displays the 'Technical support phone, toll free in Russia' as '8-800-333-80-30'.

Emergency disarming with service button

1. Make sure ignition is switched On.

On



2. Push service button or external transceiver button a number of times, equal to the first digit of emergency disarm code.

Push
X times



X - first digit of
emergency disarm
code

3. Each digit entry will be confirmed within 3 sec with service button LED flashes in a number equal to a sequence number of corresponding digit entered (1,2, 3 or 4 times).



4. Repeat 1...2 steps for remaining digits.

5. Valid code entry is confirmed with 3 flashes and 3 sounds, system turns disarm.

If invalid emergency disarm code is entered 3 times, then next entry shall be blocked for 15 min. Each button push in this interval will be indicated with 5 flashes.

Example of entry the code 5342

	on		off		on		off		on		off	
Ignition												
Press the service button		5 times			3 times				4 times			
Flashes of the service button				1 time			23 times					times

	on		off		on	
Ignition						
Press the service button		2 times				
Flashes of the service button				4 times		3 times

Emergency disarming with SMS text message

Send SMS text command **30 XXXX** , where XXXX — emergency disarm code from ID card.

Changing emergency disarm code with service button (or external transceiver button)

1. Switch system in disarmed mode if it is armed.
2. Push service button 4 times.
3. Switch ignition On. 4 LED flashes and 4 sounds shall follow.
4. Entry into code recording will be confirmed with 2 LED flashes and 2 sounds.

If nothing is done withing 5 sec system shall turn Off emergency code recording mode.

5. Switch ignition Off.
6. Switch ignition On and push service button a number of times equal to a first digit of existing emergency disarm code.
7. Switch ignition Off. Each digit entry will be confirmed with LED flashes equal to a sequence number of corresponding digit entered (1,2, 3 or 4 times).
8. Repeat 6...7 steps for remaining digits.
9. Valid existing code entry will be confirmed with 2 LED flashes and 2 beep sounds.
10. Switch ignition On. Push service button a number of times equal to a first digit of a new emergency disarm code.
11. Switch ignition Off. Each digit entry will be confirmed with LED flashes equal to a sequence number of corresponding digit entered (1, 2, 3 or 4 times).
12. Repeat 10...12 steps for remaining new code digits.
13. A new code entry will be confirmed with 2 LED flashes and 2 beep sounds.
14. Enter a new code once again repeating 10...12 steps.
15. New emergency disarm code recording will be confirmed with 2 LED flashes and 2 beep sounds.

