

Emergency disarming


System can be fully disarmed with emergency disarm code, when:

- Tag is lost
- Tag or remote key battery discharged
- Anti hijack mode is activated

Emergency disarming with service button

1. Make sure ignition is switched On.

On

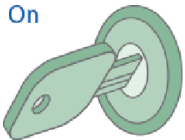

2. Push service button or external transceiver button a number of times, equal to the first digit of emergency disarm code.

Push
X times



X - first digit of
emergency disarm
code

3. Each digit entry will be confirmed within 3 sec with service button LED flashes in a number equal to a sequence number of corresponding digit entered (1,2, 3 or 4 times).

X times



4. Repeat 1...2 steps for remaining digits.
5. Valid code entry is confirmed with 3 flashes and 3 sounds, system turns disarm.

If invalid emergency disarm code is entered 3 times, then next entry shall be blocked for 15 min. Each button push in this interval will be indicated with 5 flashes.

Example of entry the code 5342

	on		off		on		off		on		off
Ignition											
Press the service button		5 times			3 times				4 times		
Flashes of the service button				1 time			23 times				times

	on		off		on	
Ignition						
Press the service button		2 times				
Flashes of the service button				4 times		3 times

Emergency disarming with SMS text message

Send SMS text command **30 XXXX** , where XXXX — emergency disarm code.

Changing emergency disarm code with service button (or external transceiver button)

1. Switch system in disarmed mode if it is armed.
2. Push service button 4 times.
3. Switch ignition On. 4 LED flashes and 4 sounds shall follow.
4. Entry into code recording will be confirmed with 2 LED flashes and 2 sounds.

If nothing is done withing 5 sec system shall turn Off emergency code recording mode.

5. Switch ignition Off.
 6. Switch ignition On and push service button a number of times equal to a first digit of **existing** emergency disarm code.
 7. Switch ignition Off. Each digit entry will be confirmed with LED flashes equal to a sequence number of corresponding digit entered (1,2, 3 or 4 times).
 8. Repeat 6...7 steps for remaining digits.
 9. Valid existing code entry will be confirmed with 2 LED flashes and 2 beep sounds.
 10. Switch ignition On. Push service button a number of times equal to a first digit of a new emergency disarm code.
 11. Switch ignition Off. Each digit entry will be confirmed with LED flashes equal to a sequence number of corresponding digit entered (1, 2, 3 or 4 times).
 12. Repeat 10...12 steps for remaining new code digits.
 13. A new code entry will be confirmed with 2 LED flashes and 2 beep sounds.
 14. Enter a new code once again repeating 10...12 steps.
 15. New emergency disarm code recording will be confirmed with 2 LED flashes and 2 beep sounds.
-