


Changing the unlock code

To change the code to a new one, you need to know the current unlock code.


Changing the unlock code requires entering the "Programming" mode.

Entering the "Programming" mode for i95 ECO and i95 Immobilizers:

1. Switch the immobilizer to "Emergency Unlock" mode and leave the ignition on.
2. After 20 seconds, a long (10-second) signal will sound. Turn off the ignition during the long signal.

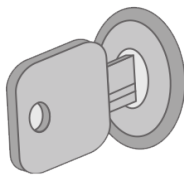



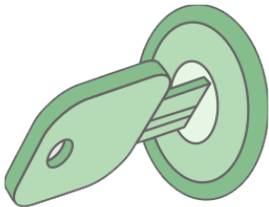

























3. Turn on the ignition. There will be 5 short confirmation sound signals.



The immobilizer will enter the "Programming" mode.

Example of entering the "Programming" mode using the unlock code 1798 for i95 ECO, i95 Immobilizers

1. Switch the immobilizer to "Emergency Unlock" mode.

| | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  |
|-----------------|---|--|---|--|---|--|--|---|---|--|---|
| Зажигание |  |  |  |  |  |  |  |  |  |  |  |
| Звуковой сигнал | через 20 сек. |  10 сек. |  1 раз |  7 раз |  9 раз |  8 раз |  3 раза | | | | |

2. Switch the immobilizer to "Programming" mode.

| | Вкл.  | Выкл.  | Вкл.  |
|-----------------|---|---|---|
| Зажигание |  |  |  |
| Звуковой сигнал |  3 раза | через 20 сек.  10 сек. |  5 раз |

Entering "Programming" mode for i95 LUX Immobilizer

1. Switch the immobilizer to "Emergency Unlock" mode and leave the ignition on.
2. Press the button on the indicator module briefly.


Короткое нажатие




The LED will start flashing yellow.

3. Within the next 2 minutes, press and hold the button on the indicator module for more than 3 seconds until the LED goes out.

Нажатие более 3 сек.

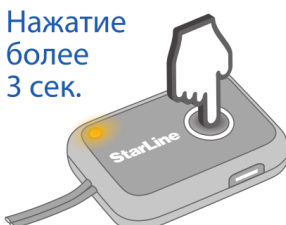



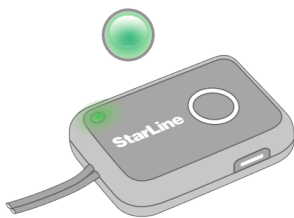














4. Release the button. There will be 5 short signals with the green LED flashing.





The immobilizer will enter the "Programming" mode.

Example of entering the "Programming" mode using the unlock code 1798 for i95 LUX Immobilizer

1. Switch the immobilizer to "Emergency Unlock" mode.

| | | | | | | | |
|-----------------------|---|--|---|---|---|---|--|
| Нажатие кнопки модуля |  |  > 3 сек.  |  |  |  |  | |
| Световой сигнал | до 2 мин. | |  1 раз |  7 раз |  9 раз |  8 раз |  3 раза |
| Звуковой сигнал | | |  1 раз |  7 раз |  9 раз |  8 раз |  3 раза |


2. Switch the immobilizer to "Programming" mode.

| | | | |
|-----------------------|---|--|--|
| Нажатие кнопки модуля |  |  > 3 сек.  | |
| Световой сигнал |  мигания до 2 мин.  |  5 раз | |
| Звуковой сигнал | |  5 раз | |

Changing the unlock code

To change the unlock code after switching the immobilizer to "Programming" mode, follow these steps:

1. Remove the power source from the tag.

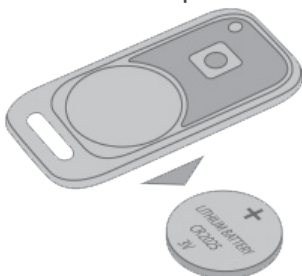

2. Insert the power source into the tag.



3. After a few seconds, the LED on the tag will start flashing green, indicating parameter input.

Мигания
по 3 сек.



4. Press the button on the tag once when the LED is lit.



After the LED stops flashing, there will be a short green flash, after that the LED will turn red.

5. While the LED is lit press the button the number of times corresponding to the first digit of the new unlock code (from 1 to 9).





 

 



 



A series of red flashes will follow, the number of which will correspond to the button press. After a short pause the LED will light up again.

6. Enter the remaining digits of the new unlock code following step 5.
7. Successful change of the unlock code will be confirmed by a series of sound signals corresponding to its new value: the number of signals in the first series will correspond to the 1st digit, the second series to the 2nd digit, the third series to the 3rd digit, and the fourth series to the 4th digit of the new code.

The immobilizer will remain in "Programming" mode until the ignition is turned off.

Example of entering a new unlock code 5678 using the tag

| | | | | | | | | |
|----------------------------|---|--|---|--|---|---|---|--|
| Нажатие кнопки метки |  5 раз | |  6 раз | |  7 раз | |  8 раз | |
| Световой сигнал |  3 сек. |  5 раз |  3 сек. |  6 раз |  3 сек. |  7 раз |  3 сек. |  8 раз |