


Emergency Unlock Mode

In case the tags are lost or the battery is discharged, the car's engine will be blocked. To continue driving, it's necessary to switch the immobilizer to "Emergency Unlock" mode.

Entering this mode is done using the unlock code. The unlock code is located beneath the protective layer of the plastic card included in the package. It consists of four digits from 1 to 9 inclusively and can be changed by the user.

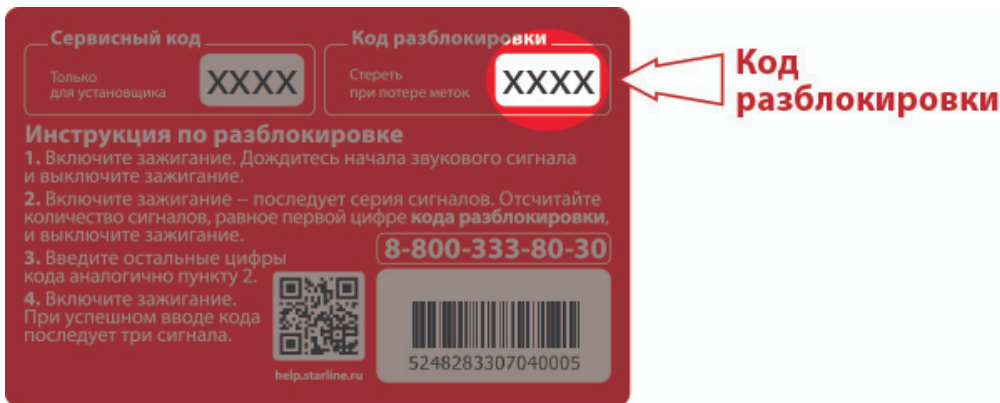


If the unlock code is entered incorrectly, a "long" signal will sound. If the code is entered incorrectly 5 times within 30 minutes, the input procedure will be blocked for 15 minutes. The prohibition on entering the code is lifted when a tag appears.

When switching to "Emergency Unlock" mode, the locking module issues a pulse to open the hood or doors.


In "Emergency Unlock" mode, the engine is not blocked. Exiting this mode occurs automatically when a tag appears within the range. Turning off the ignition does not exit the "Emergency Unlock" mode.

Unlocking via Ignition for i95 ECO, i95 Immobilizers


1. Turn on the ignition.

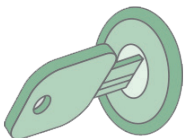


2. Wait for the start of the sound signal (if no tags are present) and turn off the ignition.

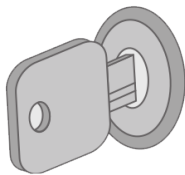

3. Turn on the ignition - a series of sound signals will follow.

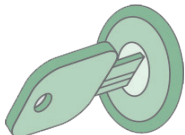


4. Count the number of signals equal to the first digit of the unlock code and turn off the ignition.

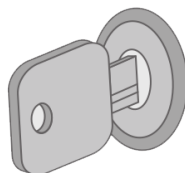

5. Enter the remaining digits of the unlock code following steps 3-4.





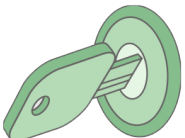


















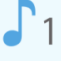

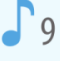

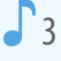
6. Turn on the ignition.

If the unlock code is entered correctly, 3 short sound signals will follow.




The immobilizer will switch to "Emergency Unlock" mode.

Example of entering the unlock code 1798 using the ignition:


| | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  | Выкл.  | Вкл.  |
|-----------------|---|--|---|--|---|--|--|--|---|--|---|
| Зажигание |  |  |  |  |  |  |  |  |  |  |  |
| Звуковой сигнал | через 20 сек. |  10 сек |  1 раз |  7 раз |  9 раз |  8 раз |  3 раза | | | | |

Unlocking via Indicator Module for i95 LUX Immobilizer


1. Turn on the ignition

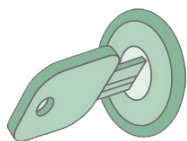

2. Press and hold the indicator module button for more than 3 seconds - until the LED goes out. Release the button.

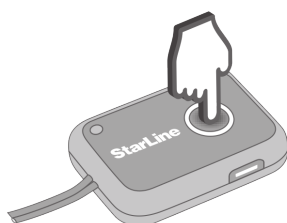

3. Yellow flashes will follow, accompanied by sound signals. Count the number of flashes equal to the first digit of the unlock code and briefly press the indicator module button. The entry of the first digit is complete.

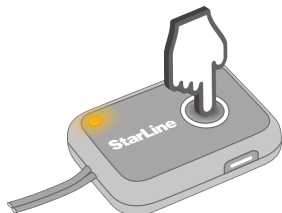











4. Enter the remaining digits of the unlock code following step 3.
5. If the code is entered correctly, 3 short sound signals will follow, accompanied by green LED flashes.



The immobilizer will switch to "Emergency Unlock" mode

Example of entering the unlock code 1798 using the indicator module:

| | | | | | | | |
|-----------------------|---|---|---|---|---|---|--|
| Нажатие кнопки модуля |  |  |  |  |  |  | |
| Световой сигнал | |  |  1 раз |  7 раз |  9 раз |  8 раз |  3 раза |
| Звуковой сигнал | | |  1 раз |  7 раз |  9 раз |  8 раз |  3 раза |