

Setup Recommendations

When visiting an installation center for the installation and configuration of the immobilizer, we recommend that you draw the installer's attention to the programmable options designed to provide additional comfort and security during the use of the device.

Below are the main parameters of the immobilizer available for configuration:

- **“Hands-Free” Mode (only for i95 and i95 LUX)** – Used for automatically locking and unlocking the car doors when the owner with the tag approaches or moves away from the stationary vehicle.
- **Universal Channel Connection Mode** – Determines the operating mode of the universal channel, which is intended for implementing one of the following options:
 - Engine lock when the tag is lost in anti-hijack mode after pressing the brake pedal;
 - Determining the status of door or hood limit switches;
 - Unlocking the central door lock by the touch sensor signal on the door handle in “Hands-Free” mode (only for i95 and i95 LUX);
 - Activating the brake lights to warn of the vehicle's impending stop before the blocking algorithm begins;
 - Indicating the locking and unlocking of doors using the parking lights.
- **Delay Before Blocking After Start of Movement** – Sets the delay duration before blocking activation after the start of movement in the absence of a tag signal:
 - No delay;
 - 5 seconds;
 - 10 seconds.
- **Intermittent Blocking Algorithm** – Allows simulating engine malfunction during blocking.
- **Sound Indication** – Enables or disables sound signals from the indicator module in the following cases:
 - Tag detection when the ignition is turned on;
 - Tag loss in normal mode;
 - Blocking warning;
 - Low battery indication of the tag.
- **Light Indication (only for i95 LUX)** – Enables or disables light signals from the indicator module in the following cases:
 - Tag detection when the ignition is turned on;
 - Blocking warning;
 - Indication of the current operating mode;
 - Low battery indication of the tag.

For detailed information on setting up the immobilizer, refer to the relevant sections of the installation instructions and the user manual.

Версия #2

Admin создал 20 мая 2024 15:24:56

Admin обновил 20 мая 2024 15:54:17