

Owner authorisation code (PIN-to-Drive)

Pin-to-Drive code entered with standard vehicle's buttons is used for secondary owner authorisation at disarming.

If owner has not authorised within 1 min, engine will be blocked for 1 min at attempt to start it or until successful authorisation passed.

The secondary authorisation method and interval are selected in the system configuration by installer

Recommend connect external buzzer or siren for the code entry sound confirmation

Entering PIN-to-Drive authorisation code:

1. Disarm system if it is armed



2. Switch ignition On



3. The series of triple sounds of external buzzer will follow. System is waiting for the code entry

4. Enter PIN code by a sequence of vehicle's standard buttons pressing with no more than 3 sec push intervals

presses.
Press the standard car buttons



5. If valid code entered, 2 buzzer beeps come up and system shall disarm.

If invalid code entered, then series of triple beeps continues - retry code entry from step 3

The owner's authorisation code consists of a button sequence with 2 to 30 presses of the standard vehicle buttons. See the list of supported standard buttons on the can.starline.bz

If no sound signal follows after pressing the factory button, then this button is not supported in this vehicle
