


Lights and sound indication

Security system indicates its status by means of sounds (siren or buzzer) and lights (hazard or other lights)

 — short signal;



 — long signal.

Events	Lights	Sounds
Arming		
Arming with one of secured zones breach		
Arming with Hands free mode disabling		
Arming with Hands free mode disabling and one of secured zones breach		
Disarming		
Disarming (one of secured zones breached in armed mode)		
Disarming with Hands free mode disabling	—	
Alarm	30 sec	30 sec
Warn away alarm		
Panic	10 sec	10 sec
Trunk unlock		
Anti-Hijack mode off	-	

LED service button indication

State of security system	LED light
Disarmed	Off
Disarmed with ignition On and one of secured zones breach (doors, hood, trunk)	1 flash per 5 sec
Armed	1 flash per 1 sec
Armed with Hands free mode active	2 flashes per 1 sec
Engine is running	Continuous On
Service (valet) mode	Off
Immobilizer mode active	Off
Anti-Hijack mode active	10 times per 1 second
Invalid emergency disarm code entered	4 flashes
Emergency disarm code entry blocked for 15 min	5 flashes
Valid emergency disarm code entered	2 flashes

Embedded buzzer sound indication

Events	Sounds
Waiting for authorization	10 sec
Tag battery discharged (at ignition On)	
Valid authorization PIN code entered	
Invalid authorization PIN code entered	