


Emergency security deactivation

If the tag was lost, the tag battery has discharged, there is no access to the mobile application or the «Anti hijack» mode is on, use the code of emergency security deactivation given on the plastic card.

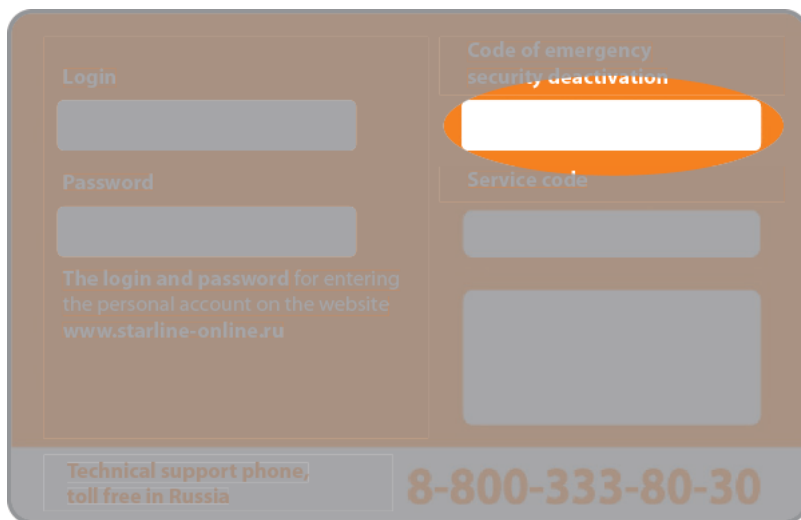


The image shows a digital form for Starline's online account. On the left, there are fields for 'Login' and 'Password', with a note below stating: 'The login and password for entering the personal account on the website www.starline-online.ru'. On the right, there is a section titled 'Code of emergency security deactivation' with a white input field, and below it, a 'Service code' section with two input fields. At the bottom, a grey bar contains the text 'Technical support phone, toll free in Russia' and the phone number '8-800-333-80-30'.

Do the following to deactivate complex security:

1. Switch on the ignition. The «Alarm» mode is activated.

On

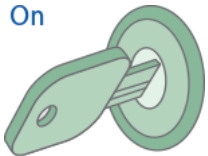

2. Press the service button the number of times corresponding to the first digit of the code of emergency security deactivation.

Press
X times



X - the first digit
of the code
of emergency
security deactivation

3. Switch on ignition or wait for 5 seconds. The LED on the service button will light up, the number of flashes will correspond to the ordinal number of the digit of the code of emergency security deactivation (1,2, 3 or 4 times).



4. Switch on the ignition.
On



5. Repeat items 2-4 for the remaining code digits.

If the code of emergency security deactivation is entered correctly, 3 short sound signals of the horn and 3 flashes of light signals will follow. The complex will set to the «Security off» mode.

If the code of emergency security deactivation is entered incorrectly 3 times, the possibility of repeated code entry will be blocked for 15 minutes and an SMS-notification will be sent to the owner's telephone.

An attempt at digit entry will be indicated by 5 LED flashes.

Example of entry of code 5342

| | | | | | | | | | | |
|-------------------------------|----|---------|--------|--|---------|----------|--|---------|-----|-------|
| | on | | off | | on | off | | on | off | |
| | | | | | | | | | | |
| Ignition | | | | | | | | | | |
| Press the service button | | 5 times | | | 3 times | | | 4 times | | |
| Flashes of the service button | | | 1 time | | | 23 times | | | | times |



| | | | | | | |
|-------------------------------|----|---------|---------|--|----|---------|
| | on | | off | | on | |
| | | | | | | |
| Ignition | | | | | | |
| Press the service button | | 2 times | | | | |
| Flashes of the service button | | | 4 times | | | 3 times |

