

GSM control commands

Complex control by means of GSM commands is only possible if the GSM module is available.

The telephone number, from which the first call to the complex number was made, will be recorded automatically as the owner's main number. All commands from this number are sent without a GSM-password. To send commands from other numbers, a password shall be entered in the beginning of the command text (for instance, send the following SMS-message for security activation "1234 11", where 1234 — GSM password, 11 — command number).

The GSM-password is set from the owner's main number at the first call.

The control commands are given in the table.

SMS command text	Command meaning
10	Deactivate security
O-	
11	Security activation
O+	
12	Security activation without shock sensor
13	Security activation without an additional sensor
14	Security activation without preliminary level of the shock sensor
15	Security activation without tilt sensor and motion sensor
19	Activation of the «Panic» mode
PANIC	
20	Remote engine stopping
D-	
21	Remote engine starting
D+	
220	Switch off of the starting pre-start engine heater
221	Switch on of the starting pre-start engine heater

SMS command text	Command meaning
30 XXXX	Deactivation of the «Anti hijack» mode, where xxxx is the code of emergency security deactivation is given on the owner's plastic card
A-XXXX	
31	Activation of «Anti hijack» mode
A+	
40	Car coordinate request
GPS	
41	Car state request
AUTO	
45	Request about the state of GSM/GPRS connection and balance data
BALANCE	
MONEY	
50	Deactivation of the service mode
S-	
51	Activation of the service mode
S+	
70	Deactivation of the «Hands free mode»
R-	
71	Activation of the «Hands free mode»
R+	

Версия #2

Admin создал 15 февраля 2024 10:23:45

Admin обновил 19 февраля 2024 10:43:44