

Registration of StarLine R4 code relay

If the code relay StarLine R4 was purchased separately, it must be registered in the memory of the main unit, having first connected it according to the instruction:

1. Disarm the security system. Turn off the ignition if it was on.
2. Connect the OUTPUT and INPUT wires of the code relay to each other.
3. Apply power (BAT and GND wires).
4. Press the service button 7 times.
5. Turn on the ignition.
6. There will be 7 signals from the LED and the siren.
7. Then there will be 2 signals from the LED and the siren, indicating entry into registration mode.
8. Successful registration will be confirmed by a brief activation of the built-in StarLine R4 relay.
9. Turn off the ignition and disconnect the OUTPUT and INPUT wires.

Версия #2

Admin создал 19 февраля 2024 11:29:58

Admin обновил 19 февраля 2024 11:41:58