

# Light and sound indication



The security system provides various options for indicating modes such as "Disarmed", "Armed", and "Alarm":






- **Hidden:** Light and sound indicators are disabled.
- **Silent:** Only light indicators are enabled.
- **Sound:** Only sound indicators are enabled.
- **Full:** Both light and sound indicators are enabled.








The default setting includes sound notifications with sirens and emergency light signals. The indicator mode is configured by the installation specialist during complex setup.

## Indicator table

The security complex informs about its status by means of sound (horn) and light signals (turn signals):

-  — short signal;
-  — long signal.



| Event   | Light signals   | Horn  |
|---|---|---|
| Arming  |    |    |
| Arming with security zone breach  |     |       |
| Arming with deactivation of «Hands free»                                |    |     |
| Arming with deactivation of «Hands free» mode with security zone breach |     |      |
| Disarming   |     |     |
| Disarming (one of the zones was violated in the security cycle)         |      |      |


|  |   |   |
|--|---|---|
| Disarming with disabling 'Hands-Free' mode | —   |   |
| Alarm                                      | 30 s  | 30 s  |
| Warning level alarm                        |  |  |
| Panic                                      | 10 s  | 10 s  |
| Trunk opening                              |  |  |
| Exit from service mode                     |  |  |

# LED Indicator

| System State  | LED Indicator        |
|---|----------------------|
| Disarmed  | Not lit              |
| Disarmed with ignition and one zone violation (door, hood, trunk) | Once every 5 seconds |
| Armed   | Once per second      |
| Armed with "Hands-Free" mode enabled                              | Twice per second     |
| Engine Running  | Constantly lit       |
| Service Mode  | Not lit              |
| "Trip Prohibition" Function Enabled                               | Not lit              |
| Anti-hijack Mode Enabled  | 10 times per second  |
| Incorrect Emergency Disarm Code Entered                           | Four times           |
| Emergency Disarm Code Entry Blocked for 15 minutes                | Five times           |
| Correct Emergency Disarm Code Entered                             | Twice                |

# Sound Indicator

| Event   | Sound Indicator   |
|---|---|
| Waiting for Authorization                           | 10 seconds  |
| Remote Key Battery Low (when ignition is turned on) |  |
| Successful Owner Authorization Code Input           |  |

| Event                                    | Sound Indicator   |
|--|---|
| Incorrect Owner Authorization Code Input |  |

---