

Control with wireless tag (transponder) (optional accessory)

Wireless tags availability depends on delivery set

The included and optional tags are supplied from factory in transport (power saving) mode, i.e. inactive! Pushing a tag button in this mode is indicated by green and red alternating flashes of the built-in LED. To switch it to normal mode push a tag button several times until flashing color turns to green



Connection check

Push button once to check tag connection status. 2 LED flashes means connection with security main unit established, 1 flash means disconnected. A flash color corresponds to the current active mode:

- green-Regular mode, Anti-hijack is disabled

- red–Anti-hijack mode is enabled
- yellow–Service mode is enabled

Control over security system

Duration of a tag button pushing:

- short – push and release button, followed with a flash of corresponding current operation mode;
- long–push and hold button until LED begins flashing.

Duration of long push are of 2 levels:

- 1 level – push and hold button followed with double short flashes of a current operating mode and then long flash at which button must be released;
- 2 level – push and hold the tag button followed with double short flashes of a current operating mode, then one long flash and then followed with serial flashes at which button must be released.

Command	Button push
Arm/Disarm	1 short
Enable / disable Anti-hijack by a tag away	long 1 level
Enable/Disable Service mode	long 2 level

Replacing a tag battery

Wireless tag (transponder) is equipped with CR2032 type Li-ion battery.

Tag battery discharging is indicated with 3 sounds of embedded main unit buzzer (or siren) at ignition On and owner is notified with text message to his phone number. Then battery must be replaced as soon as possible

To replace battery open a tag casing carefully with a flat metal or plastic item, remove discharged battery from slot. Install a new battery in the slot observing correct polarity (positive side up, as shown on picture). Then fix a cover back. Tag is ready for operation.



A smartphone with support of Bluetooth 4.2 and above can also be used as a tag. See [Devices registration](#) article to pair a smartphone as a tag.

The smartphone operation as a tag may be limited by operating system restrictions and power saving settings in a particular phone