

Emergency disarming

System can be fully disarmed with emergency disarm code, when:

- tag is lost
- tag or remote key battery discharged
- Anti-hijack mode is activated

Emergency disarming with service button

1. Make sure ignition is switched On

On



2. Push service button or external transceiver button a number of times, equal to the first digit of emergency disarm code

Push
X times



X - first digit of
emergency disarm
code

3. Each digit entry will be confirmed within 3 sec with service button LED flashes in a number equal to a sequence number of corresponding digit entered (1,2, 3 or 4 times)

X times



4. Repeat 1...2 steps for remaining digits
5. Valid code entry is confirmed with 3 flashes and 3 sounds, system turns disarm

If invalid emergency disarm code is entered 3 times, then next entry shall be blocked for 15 min. Each button push in this interval will be indicated with 5 flashes

Example of entry the code 5342

5. switch ignition Off
 6. switch ignition On and push service button a number of times equal to a first digit of existing emergency disarm code
 7. switch ignition Off. Each digit entry will be confirmed with LED flashes equal to a sequence number of corresponding digit entered (1,2, 3 or 4 times)
 8. repeat 6...7 steps for remaining digits
 9. valid existing code entry will be confirmed with 2 LED flashes and 2 beep sounds
 10. switch ignition On. Push service button a number of times equal to a first digit of a new emergency disarm code
 11. switch ignition Off. Each digit entry will be confirmed with LED flashes equal to a sequence number of corresponding digit entered (1, 2, 3 or 4 times)

 12. repeat 10...12 steps for remaining new code digits
 13. new code entry will be confirmed with 2 LED flashes and 2 beep sounds
 14. enter a new code once again repeating 10...12 steps
 15. new emergency disarm code recording will be confirmed with 2 LED flashes and 2 beep sounds
-