


Connecting 6th Generation Security Systems

StarLine Master app lets you set up security systems either by connecting the device to a computer or wirelessly using Bluetooth Smart.

Connecting a security system to a computer

StarLine B9, B9v2, B9v3, S9, S9v2, S9v3, E9, E9v2, E9v3, M18, i96CAN, Сигма 15

1. Connect a security system to a computer using microUSM cabel.
2. Launch StarLine Master app and make sure the connected device is detected.

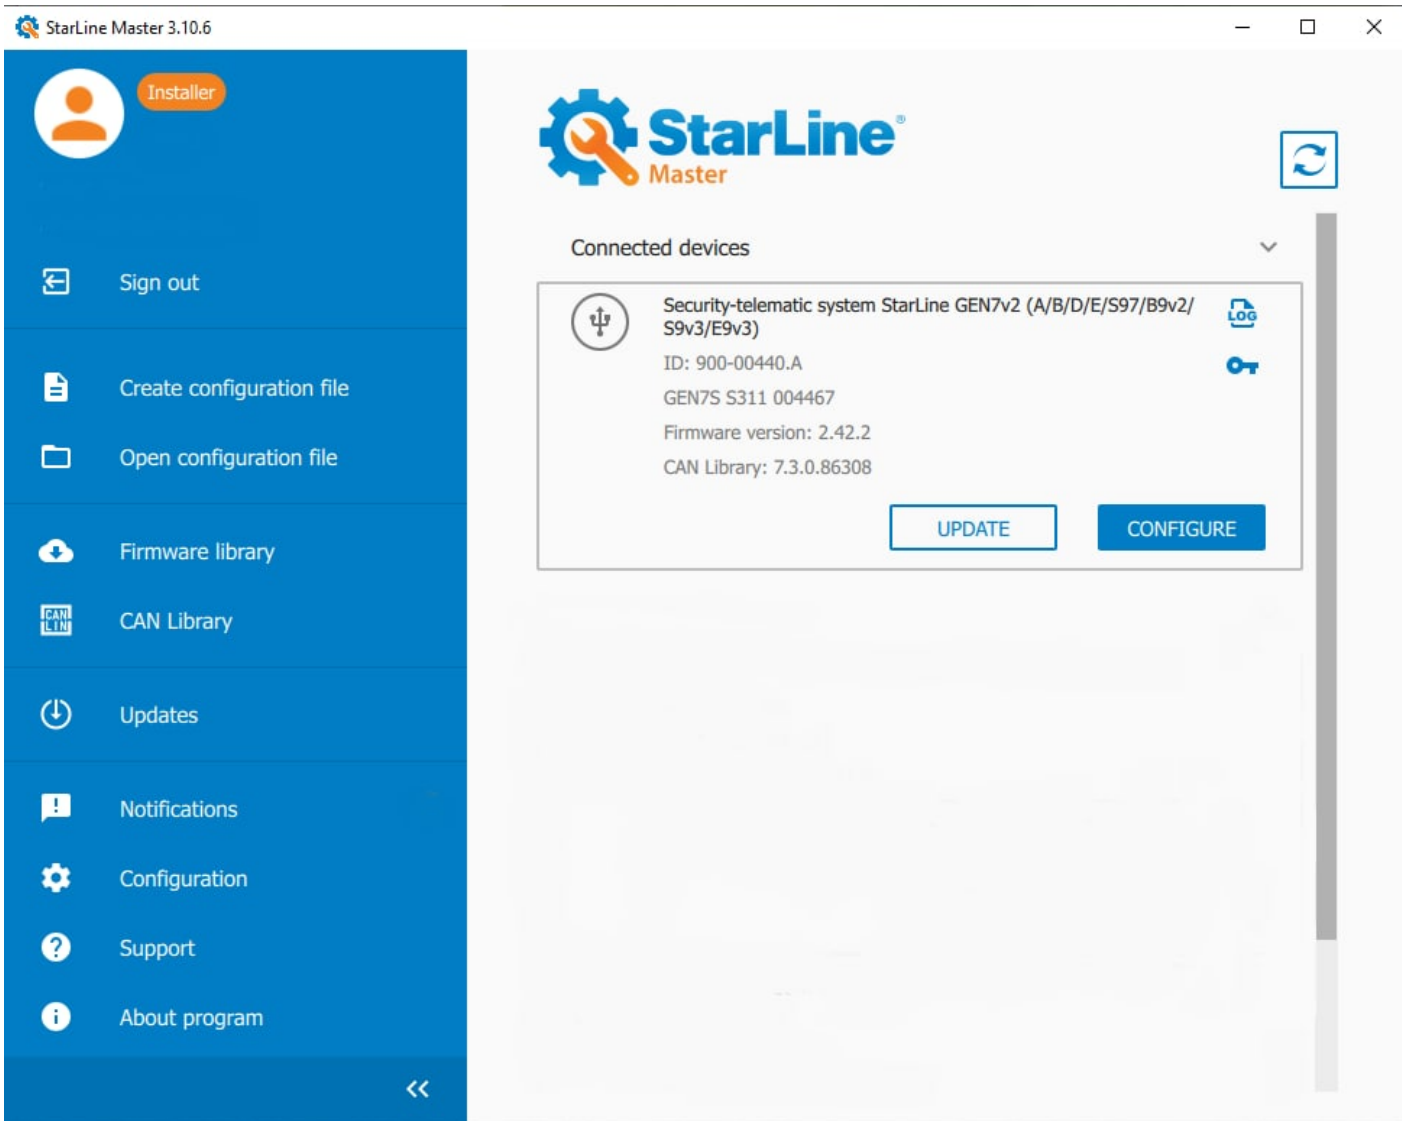

3. Press «Configure».

4.If needed, enter service code shown on the owner's plastic card in the next window.

Login

Password

Emergency disarm code

Service code

Login and password for access to **starline.online** private account, if GSM module available

Connection via Bluetooth Smart wireless channel

StarLine B9, B9v2, B9v3, S9, S9v2, S9v3, E9, E9v2, E9v3

Use the Bluetooth indicator module to operate the security system with StarLine Master app.



1. Connect Bluetooth indicator module to a computer using microUSB cable.
2. Launch StarLine Master app.
3. Set the security system to "Disarmed" mode
4. Put the security system into Bluetooth setup mode using one of following ways:
 - 4.1 Press service (valet) button 9 times. Switch ignition On within 3 sec.
 - 4.2 Press service (valet) button 9 times. Wait for the LED on the service button to light up, and while it is on, press the service button once.
 - 4.3 Send an SMS with SETUP+ (for security systems with a GSM module).
5. Make sure the Bluetooth indicator module and device are detected. Select the device from the list.
6. Click «Configure».
7. If needed, enter service code shown on the owner's plastic card in the next window.

Login	Emergency disarm code
Password	Service code
Login and password for access to starline.online private account, if GSM module available	

After completing the wireless setup, switch off the ignition (for security systems with a GSM module, send an SMS with SETUP-).


StarLine i96CAN

Use the Bluetooth indicator module to operate the security system with StarLine Master app.



1. Connect Bluetooth indicator module to a computer using microUSB cable.
2. Launch StarLine Master app.
3. Set immobiliser to "Disarm" mode.
4. Switch ignition On. Press service (valet) button 9 times.
5. Turn the ignition off and then on.
6. Make sure the Bluetooth indicator module and device are detected. Select the device from the list.
7. Press «Configure».

8. If needed, enter service code shown on the owner's plastic card in the next window.

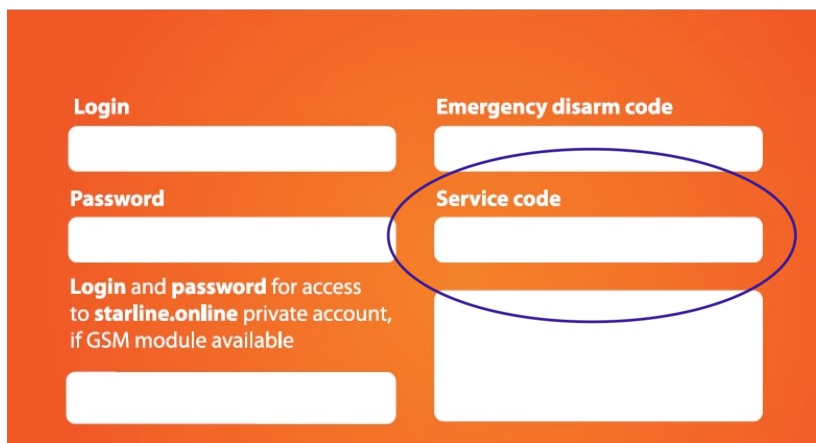

The image shows a registration form for Starline online with an orange background. It contains several input fields for user information. A blue oval highlights the 'Service code' field, which is located to the right of the 'Password' field.

Login 	Emergency disarm code
Password 	Service code
Login and password for access to starline.online private account, if GSM module available 	

Turn off the ignition 10 minutes after completing the wireless setup.